


pFlow Loss Free Meter F148




> 量測精準 採用獨家Picofly Technology 技術
提供多款小口徑管段

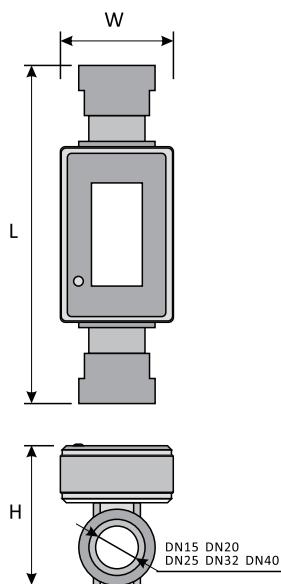

Model	L (mm)	W (mm)	H (mm)	Flow Range				Weight(kg)
				Min(gal/min)	Min(m ³ /h)	Max(gal/min)	Max(m ³ /h)	
DN15	165	65	68	0.22	0.06	13.93	3.80	0.55
DN20	170	65	75	0.40	0.11	24.93	6.80	0.60
DN25	180	65	82	0.66	0.18	38.86	10.60	0.66
DN32	190	65	90	1.06	0.29	63.79	17.40	0.73
DN40	200	65	99	1.65	0.45	98.99	27.00	0.80

> 安裝簡易

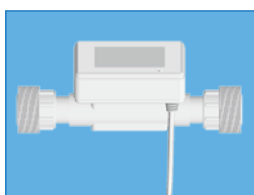

A: 選擇一個穩定並且適合的安裝位置



B: 塗上黏著劑將量測管與法蘭接合



C: 將法蘭與流量計旋緊並送電

> 應用多樣化

適用各種乾淨水流量量測的應用

- 自來水處理廠
- 工業製程用水
- 飲料食品製程
- 大樓自動化控制
- 紡織工業
- 農業灌溉



· 半導體無塵室



展林企業股份有限公司

<http://www.fayin.com.tw> fayin.tw@msa.hinet.net

tel: 02-27723316

fax: 02-81926485

pFlow